



User Guide

All apps within the Cartesian Compliance group app will operate under the compliance values defined within the app, and the Cartesian Compliance values in the task settings will be overwritten.

Tab: Cartesian Compliance

Set the cartesian impedance, in percent, by dragging the slider, clicking the left and right arrows, or entering a manually value in the input box. The visual representations of the axes and rotations will be displayed in colours representing the value currently configured for that axis or rotation.

You can individually set the impedance of:

- X Axis
- Y Axis
- Z Axis
- X Rotation
- Y Rotation
- Z Rotation

Alternatively you can change the value of the 'Set All' slider to adjust all compliance values at the same time in a single click.