



## Joint Compliance



# User Guide

All apps within the Joint Compliance group app will operate under the compliance values defined within the app, and the Joint Compliance values in the task settings will be overwritten.

### **Tab: Compliance Configuration**

Set the joint impedance, in percent, by dragging the slider, clicking the left and right arrows, or entering a value manually in the input box. The visual representations of the joints will be displayed in colours representing the value currently configured for that joint.

You can individually set the impedance of Joints 1 through 7.

Alternatively you can change the value of the 'All' slider to adjust all compliance values at the same time in a single click.